#### **COMPREHENSIVE SERVICES**

We offer competitive repair and calibration services, as well as easily accessible documentation and free downloadable resources.

#### **SELL YOUR SURPLUS**

We buy new, used, decommissioned, and surplus parts from every NI series. We work out the best solution to suit your individual needs.

Sell For Cash Get Credit Receive a Trade-In Deal

## **OBSOLETE NI HARDWARE IN STOCK & READY TO SHIP**

We stock New, New Surplus, Refurbished, and Reconditioned NI Hardware.



**Bridging the gap** between the manufacturer and your legacy test system.

0

1-800-915-6216



www.apexwaves.com

sales@apexwaves.com

All trademarks, brands, and brand names are the property of their respective owners.

Request a Quote



SCC-DO01

#### **USER GUIDE**

# SCC-D001 Isolated Digital Output Module

The SCC-DO01 is a single-channel, optically isolated digital output module. The output circuitry consists of a photomos relay and a load resistor. You can use the SCC-DO01 with a 5–24 VDC external voltage supply to switch external devices such as transistors and solid-state relays.

## **Conventions**

The following conventions are used in this guide:

The » symbol leads you through nested menu items and dialog box options

to a final action. The sequence File»Page Setup»Options directs you to pull down the File menu, select the Page Setup item, and select Options

from the last dialog box.

This icon denotes a caution, which advises you of precautions to take to avoid injury, data loss, or a system crash. When this symbol is marked on the product, see the *Read Me First: Safety and Radio-Frequency* 

*Interference* document, shipped with the product, for precautions to take.

This icon denotes a note, which alerts you to important information.

When symbol is marked on a product, it denotes a warning advising you to

take precautions to avoid electrical shock.

When symbol is marked on a product, it denotes a component that may be

hot. Touching this component may result in bodily injury.

Bold text denotes items that you must select in software, such as menu items and dialog box options. Bold text also denotes parameter names.

Italic text denotes variables, emphasis, a cross reference, or an introduction to a key concept. This font also denotes text that is a placeholder for a word

or value that you must supply.

or value th















monospace Text in this font denotes text or characters that you should enter from the

keyboard, sections of code, programming examples, and syntax examples. This font is also used for the proper names of disk drives, paths, directories, programs, subprograms, subroutines, device names, functions, operations,

variables, filenames, and extensions.

SC-2345 SC-2345 refers to both the SC-2345 connector block and the SC-2345 with

configurable connectors.

SCC SCC refers to any SCC Series signal-conditioning module.

## What You Need to Get Started

To set up and use the SCC-DO01, you need the following items:  $\square$  SC-2345/2350 with one of the following: SCC-PWR01 SCC-PWR02 and the PS01 power supply SCC-PWR03 (requires a 7 to 42 VDC power supply, not included) One or more SCC-DO01 modules □ SC-2345/2350 User Manual, available at ni.com □ SCC-D001 Isolated Digital Output Module User Guide ☐ SCC Quick Start Guide, available at ni.com ☐ Read Me First: Safety and Radio-Frequency Interference ☐ SC-2345 Quick Reference Label 68-pin E Series DAQ device, documentation, and 68-pin cable of less than 2 m length ☐ 1/8 in. flathead screwdriver ■ Numbers 1 and 2 Phillips screwdrivers ☐ Wire insulation strippers ■ NI-DAQ (current version) for Windows 2000/NT/XP/Me



**Note** The Macintosh operating system is not supported.

# **Device Specific Information**



**Note** For general SCC module installation and signal connection information, and information about the SC-2350 carrier, refer to the SCC Quick Start Guide, available for download at ni.com/manuals.

#### **Installing the Module**



**Caution** Refer to the *Read Me First: Safety and Radio-Frequency Interference* document before removing equipment covers or connecting/disconnecting any signal wires.


Plug the SCC-DO01 into any digital input/output (P0.) socket J(X+9), where X is 0 to 7, on the SC-2345. When you configure the SC-2345 according to the procedure in the SCC Quick Start Guide, the SC-2345 routes the output signal from digital line P0.(X) on the E Series DAQ device.

## **Connecting Loads to the SCC-D001**



**Note** The signal names have changed. Refer to ni.com/info and enter rdtntg to confirm the signal names.


Figure 1 and Figure 2 show two ways to connect a load and an external voltage supply to the SCC-DO01. These configurations have different electrical characteristics, as described in the *Specifications* section.

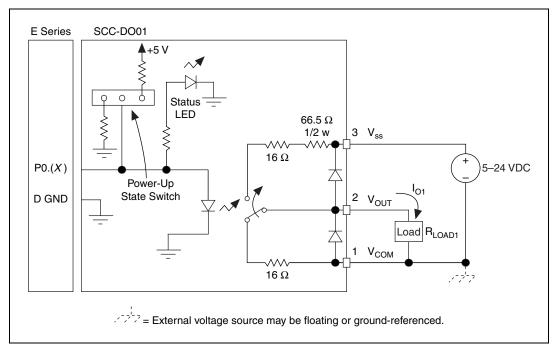

**Figure 1.** Connecting a Load  $R_{LOAD1}$  to  $V_{COM}$  and  $V_{OUT}$  (Configuration 1)

Figure 1 shows Configuration 1, with a load  $R_{LOAD1}$  connected to the  $V_{COM}$  and  $V_{OUT}$  terminals and a voltage supply connected to the  $V_{SS}$  and  $V_{COM}$  terminals. Connect Configuration 1 to the SCC-DO01 by completing the following steps:

- 1. Remove all power from the signal lines.
- 2. Strip 7 mm (0.27 in.) of insulation from the ends of the signal wires.
- 3. Insert the wires into the screw terminals.
  - a. Connect the negative lead of the voltage supply and the negative lead from  $R_{LOAD1}$  to screw terminal 1,  $V_{COM}$ .
  - b. Connect the positive lead from  $R_{LOAD1}$  to screw terminal 2,  $V_{OUT}$ .
  - c. Connect the positive lead of the voltage supply to screw terminal 1, V<sub>SS</sub>.
- 4. Tighten the screws to 0.5 to 0.6 N  $\cdot$  m (4.4 to 5.3 lb  $\cdot$  in.) of torque.

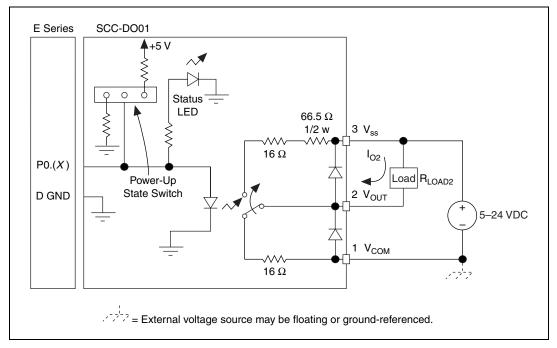

**Figure 2.** Connecting a Load  $R_{LOAD2}$  to  $V_{OUT}$  and  $V_{SS}$  (Configuration 2)

Figure 2 shows Configuration 2, with a load  $R_{\rm LOAD2}$  connected to the  $V_{\rm OUT}$  and  $V_{SS}$  terminals and a voltage supply connected to the  $V_{COM}$  and  $V_{SS}$  terminals. Connect Configuration 2 to the SCC-DO01 by completing the following steps:

- 1. Remove all power from the signal lines.
- 2. Strip 7 mm (0.27 in.) of insulation from the ends of the signal wires.
- 3. Insert the wires into the screw terminals.
  - a. Connect the negative lead of the voltage supply to screw terminal 1, V<sub>COM</sub>.
  - b. Connect the negative lead from  $R_{LOAD2}$  to screw terminal 2,  $V_{OUT}$ .
  - c. Connect the positive lead of the voltage supply and the positive lead from  $R_{LOAD2}$  to screw terminal 1,  $V_{SS}$ .
- 4. Tighten the screws to 0.5 to 0.6 N  $\cdot$  m (4.4 to 5.3 lb  $\cdot$  in.) of torque.

For information about configuring the SCC-DO01 module using NI-DAQmx, refer to the *SCC Quick Start Guide*.

# **Specifications**

These specifications are typical at 25 °C unless otherwise stated.

#### **Output Characteristics**

Configuration 1 (refer to Figure 1)

Logic Level	Output Voltage Level between $V_{OUT}$ and $V_{COM}$
$Low (I_{OI} = 0 mA)$	0 V
$High (I_{OI} = 25 \text{ mA})$	22 VDC at $V_{SS} = 24$ V 3 VDC at $V_{SS} = 5$ V

#### Configuration 2 (refer to Figure 2)

Logic Level	Output Voltage Level between $V_{OUT}$ and $V_{COM}$
Low $(I_{O2} = 25 \text{ mA})$	0.4 V
$High (I_{O2} = 0 \text{ mA})$	$V_{SS}$

Maximum continuous load current  $(I_O)$ 

Configuration 1 .......86 mA
Configuration 2 .......120 mA

Minimum load resistance (at  $V_{SS} = 24 \text{ V}$ )

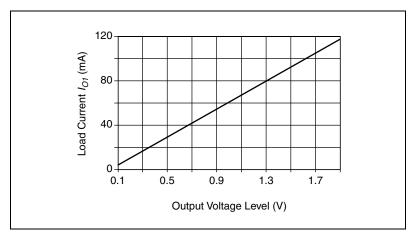


Figure 3. Load Current versus Output Voltage, Configuration 1

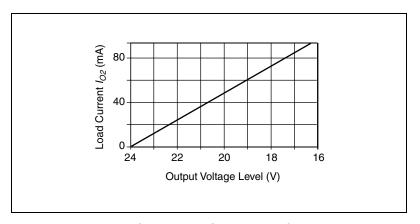


Figure 4. Load Current versus Output Voltage, Configuration 2

<sup>&</sup>lt;sup>1</sup> The switching characteristics (turn-on time, switching time, and turn-off time) of the optical isolator used on the board limit the data transfer rate.

#### **Power Requirement**

Digital power	 69	mW	max

#### **Physical Characteristics**

Mass......28.6 g (1.0 oz)

Field-wiring diameter ......28 to 16 AWG

#### **Maximum Working Voltage**

Maximum working voltage refers to the signal voltage plus the common-mode voltage.

Channel to earth.......42 V, Installation Category 2

Module to module......42 V, Installation Category 2

#### **Environmental**

Operating temperature ......0 to 50 °C

Storage temperature ......–20 to 70  $^{\circ}$ C

Maximum altitude.....2,000 m

Pollution Degree (indoor use only) ......2

## Safety

The SCC-DO01 meets the requirements of the following standards for safety and electrical equipment for measurement, control, and laboratory use:

- IEC 61010-1, EN 61010-15
- UL 3111-1, UL 6101B-1
- CAN/CSA C22.2 No. 1010.1



**Note** For UL and other safety certifications, refer to the product label, or visit ni.com/hardref.nsf, search by the model number or product line, and click the appropriate link in the Certification column.

#### **Electromagnetic Compatibility**

Emissions	EN 55011 Class A at 10 m
	FCC Part 15A above 1 GHz
Immunity	EN 61326:1997 + A2:2001,
•	Table 1

CE, C-Tick, and FCC Part 15 (Class A) Compliant



**Note** For full EMC compliance, operate this device with shielded cabling. In addition, all covers and filler panels must be installed.

#### **CE Compliance**

This product meets the essential requirements of applicable European Directives, as amended for CE marking, as follows:

Low-Voltage Directive (safety) ............. 73/23/EEC



**Note** Refer to the Declaration of Conformity (DoC) for this product for any additional regulatory compliance information. To obtain the DoC for this product, visit ni.com/hardref.nsf, search by model number or product line, and click the appropriate link in the Certification column.

Figure 5 shows the I/O connector on the bottom of the SCC-DO01.

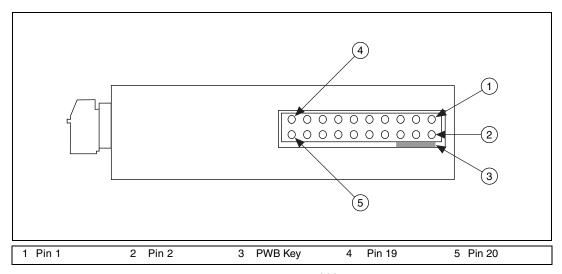


Figure 5. SCC Module Bottom View

Table 1 lists the signal connection corresponding to each pin. GND is the reference for the +5 V supply.

Table 1. SCC-D001 Pin Signal Connections

Pin Number	Signal
1	_
2	_
3	_
4	_
5	_
6	_
7	P0.(X)
8	_
9	+5 V
10	GND
11	_
12	
13	_

**Table 1.** SCC-D001 Pin Signal Connections (Continued)

Pin Number	Signal
14	_
15	_
16	_
17	_
18	_
19	_
20	_

# **Theory of Operation**

#### Setting the Power-Up State of the SCC-D001

The switch for setting the power-up state of the SCC-DO01 is on the top of the module. Switch it to *High* or *Low* depending on whether you want the output state to be high or low on power-up. The switch does not override the output state as determined by the E Series DAQ device.

#### **Status LED**

The SCC-DO01 has a status LED that indicates when an input signal registers a logic high or a logic low. The LED is located above the screw terminals. If the LED is off, the input signal is registering a logic low on the digital line.

#### **Circuit Protection**

#### **Protection Against Spike Voltages**

Two clamping diodes protect the SCC-DO01 against spike voltages caused by inductive loads and long circuit wires. One diode is connected across  $V_{SS}$  and  $V_{OUT}$  and the other diode is connected across  $V_{OUT}$  and  $V_{COM}$ .

## **Signal Isolation**

The  $V_{COM}$ ,  $V_{SS}$ , and  $V_{OUT}$  signals on each SCC-DO01 are isolated from other channels and from the SCC-DO01 internal power and ground signals. The isolation barrier protects the SCC-DO01 and other equipment from voltages up to +42 VDC. Common-mode voltages higher than +42 VDC can damage the SCC-DO01 and other equipment.



371077B-01

Mar04

© 2002–2004 National Instruments Corp. All rights reserved.