COMPREHENSIVE SERVICES

We offer competitive repair and calibration services, as well as easily accessible documentation and free downloadable resources.

SELL YOUR SURPLUS

We buy new, used, decommissioned, and surplus parts from every NI series. We work out the best solution to suit your individual needs.

Sell For Cash Get Credit Receive a Trade-In Deal

OBSOLETE NI HARDWARE IN STOCK & READY TO SHIP

We stock New, New Surplus, Refurbished, and Reconditioned NI Hardware.



Bridging the gap between the manufacturer and your legacy test system.

0

1-800-915-6216

www.apexwaves.com

sales@apexwaves.com

All trademarks, brands, and brand names are the property of their respective owners.

Request a Quote




PXI-1006



PXI™-1006 RACK MOUNT

To mount the PXI-1006 in an instrument rack, follow the steps below.

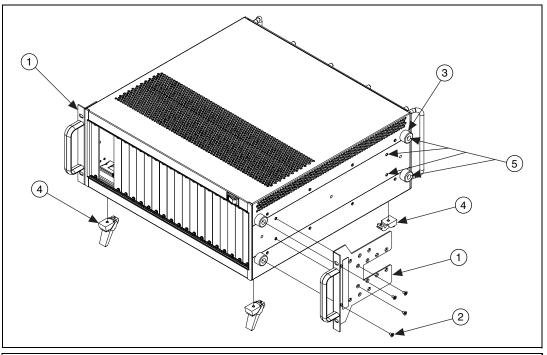

- Mounting Bracket
 M4 x 8 Flathead Screw (Qty. 8)
- 3 Rubber Feet 4 Bottom Feet

5 Holes for Reverse Mounting

Figure 1. PXI-1006 in Rack Mount Configuration

- Remove the rubber feet and bottom feet (as required) from the PXI-1006 chassis.
- 2. Install the mounting brackets onto each side of the chassis using the M4 x 8 flathead screws supplied. Note that you can recess the chassis in the cabinet rack at 1 in. increments up to 3 in. (For reverse mounting, install the brackets using the holes at the back of the chassis.)
- 3. Install the chassis in the instrument rack using four screws (not supplied).

323091A-01