COMPREHENSIVE SERVICES

We offer competitive repair and calibration services, as well as easily accessible documentation and free downloadable resources.

SELL YOUR SURPLUS

We buy new, used, decommissioned, and surplus parts from every NI series. We work out the best solution to suit your individual needs.

Sell For Cash Get Credit Receive a Trade-In Deal

OBSOLETE NI HARDWARE IN STOCK & READY TO SHIP

We stock New, New Surplus, Refurbished, and Reconditioned NI Hardware.



Bridging the gap between the manufacturer and your legacy test system.

0

1-800-915-6216



www.apexwaves.com

sales@apexwaves.com

All trademarks, brands, and brand names are the property of their respective owners.

Request a Quote



PXIe-4304

USER GUIDE AND TERMINAL BLOCK SPECIFICATIONS

NI PXIe-4304/4305 and RM-4304

NI PXIe-4304/4305, 32 Ch, 24-bit, Filtered Analog Input Module, RM-4304 Rack-Mount Terminal Block



This document explains how to install, configure, and set up the NI PXIe-4304 and NI PXIe-4305 (NI PXIe-4304/4305) simultaneous filtered modules with the RM-4304 rack-mount terminal blocks. Driver support for the PXIe-4304/4305 was first available in NI-DAQmx 15.1.1. Driver support for the RM-4304 was first available in NI-DAQmx 15.5. For the list of devices supported by a specific release, refer to the *NI-DAQmx Readme*, available on the version-specific download page or installation media.



Note The keying of this terminal block prevents it from connecting to other modules that could be damaged by the voltage present on the terminal block. However, you should only use these terminal blocks with their supported modules.

Contents

Electromagnetic Compatibility Guidelines	2
What You Need to Get Started	3
Installation	4
Install the Software	4
Unpack and Install the Module	4
Unpack and Install the Rack-Mount Terminal Block, Chassis, and Cables	6
CAL IN	10
CAL BIAS	10
In-Situ Calibration	11
Resources	12
RJ50	13
Status LED.	13
PFI0	
Switching	14
Confirm SC Express Module Recognition	
Run Test Panels	



Take an NI-DAQmx Measurement	16
NI-DAQmx Channels and Tasks	16
Configure a Task Using the DAQ Assistant in MAX	16
Use Your SC Express Device in an Application	17
Programming Examples	
Removal	18
Terminal Block and Cables Removal	18
Module Removal	18
Create a Simulated Device	19
More Information	20
Troubleshooting	20
Specifications (RM-4304)	20
Electrical	20
Input Characteristics	20
Mechanical	21
Connectors	21
Physical Characteristics	21
Environmental	22
Operating Environment	22
Storage Environment	22
Shock and Vibration	22
Safety	23
Safety Standards	23
Electromagnetic Compatibility	23
CE Compliance	24
Online Product Certification	24
Environmental Management	24
World Wide Support and Services	25

Electromagnetic Compatibility Guidelines

This product was tested and complies with the regulatory requirements and limits for electromagnetic compatibility (EMC) stated in the product specifications. These requirements and limits provide reasonable protection against harmful interference when the product is operated in the intended operational electromagnetic environment.

This product is intended for use in industrial locations. However, harmful interference may occur in some installations, when the product is connected to a peripheral device or test object, or if the product is used in residential or commercial areas. To minimize interference with radio and television reception and prevent unacceptable performance degradation, install and use this product in strict accordance with the instructions in the product documentation.

Furthermore, any modifications to the product not expressly approved by National Instruments could void your authority to operate it under your local regulatory rules.



Caution To ensure the specified EMC performance, operate this product only with shielded cables and accessories. Shielded, twisted pair cable must be used for all RJ-50 ports and the CAL IN port.



Caution To ensure the specified EMC performance, the length of any cable connected to the PFI0 port must be no longer than 3 m (10 ft).



Caution To ensure the specified EMC performance, the length of any cable connected to the Channel (RJ-50) ports must be no longer than 30 m (100 ft).

What You Need to Get Started

To set up and use the RM-4304 rack-mount terminal block with the PXIe-4304/4305 module, you need the following items:

Hardware

- RM-4304 rack-mount terminal block
- PXIe-4304/4305 module
- PXIe chassis
- 19 in, rack to accommodate the RM-4304 and PXIe chassis
- Four screws (not supplied by NI) suitable for your application to mount the RM-4304 in the rack
- SH96F-96M-42V cable and included standoffs, which are used to mount the cable to the module
- Rack-mount kit (as required for your application) for mounting the PXIe chassis in the 19 in. rack
- Cabling and sensors as required for your application
- Clamp-on ferrite beads (included with RM-4304)

Tools

- Phillips-head screwdrivers as required by your application
- Flathead screwdrivers as required by your application
- Long-nose pliers
- Wire cutter
- Wire insulation stripper
- RJ50 terminal crimper

Documentation

- NI PXIe-4304/4305 and RM-4304 User Guide and Terminal Block Specifications
- NI PXIe-4304/4305 User Manual
- PXIe chassis user manual

You can download needed documents from ni.com/manuals.

Installation

Install the Software



Note You must be an administrator to install NI software and devices on your computer.

Ensure that the following software is installed before installing the SC Express hardware:

- Your application software, such as LabVIEW, LabWindows[™]/CVI[™] or .NET. 1.
- NI-DAOmx—PXIe-4304/4305 modules were first supported in NI-DAOmx 15.1.1. RM-4304 terminal blocks were first supported in NI-DAQmx 15.5.



Note For detailed NI software version support, refer to the *NI-DAQmx Readme*. Back up any applications before upgrading software or modifying the application.

Unpack and Install the Module

Remove the packaging and inspect the module. Contact NI if the module is damaged. Do not install a damaged module.



Caution The module is static sensitive. Always properly ground yourself and the equipment when handling or connecting to the module.

Complete the following steps to install the SC Express module while referring to Figures 1 and 2:



Note To maintain forced air cooling in the PXIe system, refer to the *Maintain* Forced-Air Cooling document.


- Make sure the chassis is powered off. 1.
- 2. Connect the power cord to your chassis and then plug it into the power supply receptacle before installing the PXIe-4304/4305. The power cord grounds the chassis and protects it from electrical damage while you install the module.



Caution To protect yourself, the chassis, and the PXIe-4304/4305 from electrical hazards, leave the chassis powered off until you complete the PXIe-4304/4305 module installation.

Identify a supported PXI Express slot in the chassis. SC Express devices can be placed only in PXI Express Peripheral slots, PXI Express Hybrid Peripheral slots, and PXI Express System Timing slots. Refer to the chassis documentation for details.

Figure 1. Symbols for PXI Express/PXI Express Hybrid/PXI Slots



- PXI Express System Controller Slot
- 2 PXI Peripheral Slot

electricity.


- 3 PXI Express Hybrid Peripheral Slot PXI Express System Timing Slot
- 4. Remove the filler panel, and touch any metal part of the chassis to discharge static
- 5. Place the module edges into the module guides at the top and bottom of the slot.



Caution When installing the module, make sure both edges are positioned inside the guides and that the module components do not come into contact with adjacent modules.

- 6. Slide the module along the guides until it reaches the rear connector then seat the module by pushing the front panel until it is flush with the front panel of the chassis.
- 7. Secure the module to the chassis using the front-panel captive screws, shown in Figure 2. Tighten the screws to $0.31 \text{ N} \cdot \text{m} (2.7 \text{ lb} \cdot \text{in.})$.

Figure 2. Installing PXIe-4304/4305 Modules

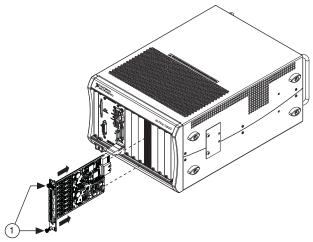

Captive Screws

Unpack and Install the Rack-Mount Terminal Block, Chassis, and Cables

Remove the packaging and inspect the terminal block, chassis, and cables. Contact NI if there is any damage. Do not install a damaged product.



Caution The module and terminal block are static sensitive. Always properly ground yourself and the equipment when handling or connecting to the module and terminal block.



Caution Do not supply hazardous voltages ($>30 \text{ V}_{rms}/42.4 \text{ V}_{nk}/60 \text{ VDC}$) to the terminal block.



Caution To ensure the EMC performance specified for the connected PXIe-4304/4305 module, operate this product only with shielded RJ50 and BNC cables.



Note The chassis can be powered on or off when connecting the terminal block.


To install the rack-mount terminal block into the rack, complete the following steps while referring to Figure 3.

- 1. Place the RM-4304 in the desired position.
- 2. Install and tighten the four rack-mounting screws.

If the chassis is not already installed in the rack, complete the following steps:

- Attach the PXIe chassis rack-mount hardware to the PXIe chassis. Refer to your rack-mount kit installation guide for more details.
- 2. Mount the PXIe chassis in the rack in the desired position. Refer to your rack-mount kit installation guide for more details.

Figure 3. RM-4304 Installation and Front Connections

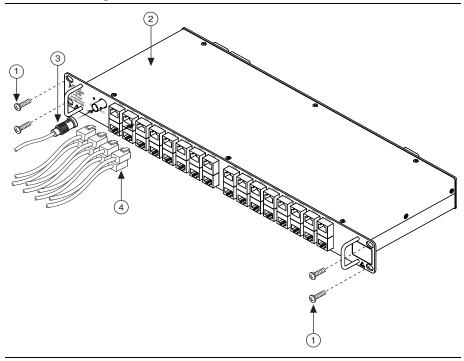


- Rack-Mounting Screws (4)
- RM-4304 Rack-Mount Terminal Block
- PFI BNC Cable
- RJ50 (32) Cable Connectors

To install the cables, complete the following steps while referring to Figures 3 and 6.

- Connect the RJ50 cable connectors to the appropriate RJ50 connector receptacles. Refer to the *RJ50* section for more information.
- Make any of the following connections as needed for your application: 2.
 - Connect the BNC cable to the PFI0 receptacle.
 - Connect calibration input.
 - Remove the 2-pin CAL IN COMBICON connector from the RM-4304.
 - Install the calibrator input wires. Refer to the *In-Situ Calibration* section for more b. information.

Connect the CAL IN cable shield to AIGND, Pin 2 and 3 of CAL BIAS Connector, as shown in Figure 4.

Figure 4. CAL BIAS Cable Connections

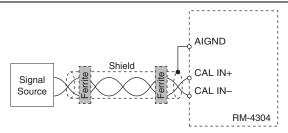


For CAL IN cable lengths greater than 3 meters, install the included clamp-on ferrite beads on both ends of the CAL IN cable. Refer to Figure 5 to install the clamp-on ferrite beads.



Note Clamp-on ferrite beads must be installed on the cable as close to the RM-4304 and to the source as possible. Placing the clamp-on ferrite beads elsewhere on the cable noticeably impairs its effectiveness.

Figure 5. Clamp-On Ferrite Bead Installation



- Install the 2-pin CAL IN COMBICON cable into the RM-4304.
- Connect the calibration bias resistors.
 - Remove the 4-pin RB1, RB2 COMBICON connector from the RM-4304. a.
 - Install the bias resistors. Refer to the *CAL IN* section for more information. b.
 - Install the 4-pin RB1, RB2 COMBICON cable into the RM-4304. c.

Connect the chassis ground wire to the chassis ground screw.

Figure 6. Cables, Resistor, and Standoff Installation

- RM-4304 Rack-Mount Terminal Block
- **PXIe Chassis**
- PXIe-4304/4305 Module
- Standoffs (2)
- Jack Screws (2x)
- SH96F-96M-42V Cable RM-4304 Connector Plug (female)
- PXIe Controller
- Calibration Input 2-position COMBICON Cable
- Calibration Bias Resistor Connector 4-position COMBICON
- 10 Bias Resistor
- 11 Jack Screws (2x)
- 12 SH96F-96M-42V Cable RM-4304 Connector Plug (male)
- 13 Chassis Ground Screw
- 14 Chassis Ground Cable
- Screw the two standoffs into the PXIe-4304/4305 module. Tighten the standoffs to 1.30 N · m (11.5 lb · in.).
- Connect the male end of the SH96F-96M-42V cable to the RM-4304 and tighten the two jack screws to 0.90 N · m (8.0 lb · in.).



Note For safety purposes and to prevent damage to equipment when high voltages are present, the SH96F-96M-42V cable is keyed to prevent connection between incompatible terminal blocks, modules, and/or cables.

- Connect the female end of the SH96F-96M-42V cable to the PXIe-4304/4305 and tighten the two jack screws to $0.90 \text{ N} \cdot \text{m} (8.0 \text{ lb} \cdot \text{in.})$.
- 7. Power on the PXIe chassis if it is powered off.

CAL IN

The CAL IN input connector on the rear of the RM-4304 allows you to connect a voltage reference that can be internally routed to the analog input of each channel (AI+, AI-) on the PXIe-4304/4305. All channels are simultaneously switched to the CAL IN by utilizing the Calibration API within NI-DAOmx. Refer to the *In-Situ Calibration* section for detailed information

The calibration source voltage is connected to the CAL IN+ and CAL IN- terminals as shown in Table 1.

Calibration Input Pin Diagram Pin Signal Name Signal Description 1 CAL IN-Calibration input negative 2 CAL IN+ Calibration input positive

Table 1. Calibration Input Connector Pin Assignments

CAL BIAS

You can use the connector labeled RB1 and RB2 on the rear of the RM-4304 to reference the CAL± input to analog ground (AIGND). For flexibility, access to both CAL+ and CAL- is provided. The CAL BIAS+ pin connects to CAL+ and the CAL BIAS- pin connects to CAL-. You can reference a floating voltage to AIGND by populating the RB1 position. To provide a differential voltage that is referenced to AIGND with zero common mode, populate both RB1 and RB2 with equal value resistors. When choosing resistor values, consider the output impedance of the external reference voltage source. Refer to Table 2 for connections.

Table 2. Bias Resistor Connector

Bias Resistor Connector	Pin	Signal Name	Signal Description
4 3 2 1	1	CAL BIAS-	RB2 calibration bias resistor for CAL-
	2	AIGND	Analog input ground
	3	AIGND	Analog input ground
●	4	CAL BIAS+	RB1 calibration bias resistor for CAL+

In-Situ Calibration

The RM-4304 provides the ability to perform in-situ calibration of input channels referenced to an external traceable voltage source that you can use to connect to the CAL IN connector. In-situ calibration offers a means to determine measurement errors and uncertainties compared to a traceable standard. The calibration data can be used to compensate for changes in the hardware, resulting in a more accurate measurement. In-situ calibration can be performed before and after test acquisition, or on a periodic schedule, to ensure data validity without physically disconnecting any inputs from the RM-4304.

During in-situ calibration, the input channels are disconnected internally from the RJ50 connectors and connected to a calibration bus that is driven by the calibration voltage reference connected to CAL IN±. Through measurement of these channels, any PXIe-4304/4305 circuitry drift since the last full calibration will be available through measurement of these channels. In-situ calibration performs a verification, but not an adjustment. Therefore, the results from in-situ calibration will not rewrite the calibration coefficients to the PXIe-4304/4305. Instead these results can be applied to the test setup, test results, or to the PXIe-4304/4305 programmatically.

To assist you with starting development of an application with in-situ calibration, an example program is available for download from the NI Community. Refer to ni.com/info and enter Info Code exsueq.

For in-situ calibration, the following connection options are supported through NI-DAQmx as shown in Table 3


Table 3. Connection Options Configurable Through NI-DAQmx Connect SC Express Calibration Accessory Channels API

Connection Option	Purpose
_cal_channel	Connect a voltage reference provided through CAL IN to the analog input of each channel.

Resources

This section describes the resources available on both the front and rear of the RM-4304. Figure 7 shows the locations of these resources.

Figure 7. RM-4304 Front and Rear View

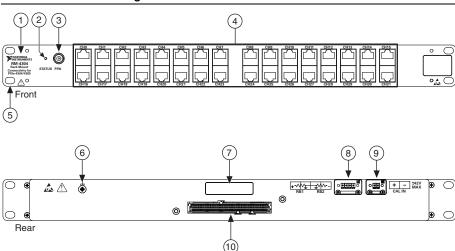

- RM-4304 Product Name 1
- 2 LED Status Indicator
- 3 PFI0
- 4 RJ50 Connectors (32)
- 5 Mounting Flanges (2x)
- 6 Chassis Ground

- Serial Number Label 7
- 8 Calibration Bias Resistor Connector 4-position COMBICON
- Calibration Input 2-position COMBICON
- 10 96-Pin DIN Cable Connector

RJ50

Refer to Table 4 for signal names and descriptions, and the correlation to the pin numbers of the RJ50 (10p10c) modular plug. Refer to Figure 8 for default switch positions.

Table 4. RJ50 Connector Pin Assignments

RJ50* (10p10c) Modular Plug Pin Number Diagram	Pin	Signal Name	Signal Description
	1	NC	No connection.
	2	AI+	Positive input signal—connected to the AI+ input of the PXIe-4304/4305 or disconnected when the channel is connected to CAL_IN+
Pin 1	3	AI-	Negative input signal—connected to the AI- input of the PXIe-4304/4305 or disconnected when the channel is connected to CAL_IN-
	4	NC	No connection.
	5	NC	No connection.
Pin 10	6	NC	No connection.
	7	NC	No connection.
	8	NC	No connection.
	9	AIGND	Analog ground.
	10	NC	No connection.

^{*} NI does not recommend using an RJ45 cable with the RM-4304 as it can physically damage pins 1 and 10 on the RJ50 connector.

Note: Use pins 2 and 3 as shielded pairs. Note: Refer to Figure 8 for default positions

Status LED

The green status LED, when lit, indicates the RM-4304 is connected to a powered PXIe-4304/4305 module. The location of the Status LED is shown in Figure 7.

PFI0

The PFI0 connector provides a female BNC connection to the PFI trigger line of the PXIe-4304/4305. The RM-4304 passes this signal directly through. Refer to the NI PXIe-4304/4305 User Manual for more information about using the PFI trigger line. Refer to Table 5 for signal names and descriptions.


Table 5. BNC Connector Pin Assignments

BNC PFI0 Connector Pin Diagram	Pin	Signal Name	Signal Description
	1	PFI0	PFI input
(<u>)</u> 1	2	DGND	Digital ground

Switching

The RM-4304 provides software controlled switching that allows you to programmatically control whether the attached PXIe-4304/4305 is connected to the CAL IN source on the back of the RM-4304 or the RJ50 connectors on the front of the RM-4304. Figure 8 illustrates the switching provided.

Figure 8. RM-4304 Switching Configurations

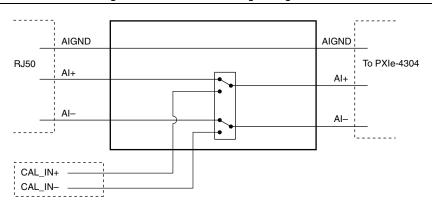

Confirm SC Express Module Recognition

To confirm module recognition, complete the following steps:




Note Software support for the PXIe-4304/4305 is provided by NI-DAOmx. The Read Me First: NI-DAQmx and DAQ Device Installation Guide, which you can download at ni.com/manuals, offers step-by-step NI-DAQmx instructions for installing software and hardware, configuring channels and tasks, and getting started developing an application. For detailed NI software version support, refer to the NI-DAOmx Readme.

Launch MAX.



2. Expand Devices and Interfaces, and expand the chassis in which the module is located to confirm that MAX detects the module and terminal block. The terminal block should appear beneath its associated module. If your module or terminal block is not listed, press <F5> to refresh MAX. If the module is still not recognized, go to ni.com/support/ daqmx.

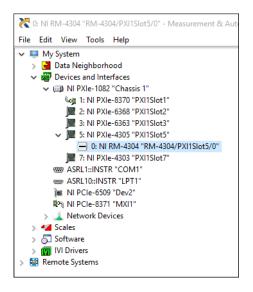




Tip Using an NI-DAQmx simulated device, you can test NI-DAQmx applications without installing hardware. Refer to the *Create a Simulated Device* section for instructions for creating NI-DAQmx simulated devices.

Right-click the module name and select Self-Test. When the self-test completes, a verification message appears. If an error occurs, refer to ni.com/support/dagmx.

For information about sensors, go to ni.com/sensors.

Run Test Panels

- 1. In MAX, expand **Devices and Interfaces** select the chassis in which the module is located.
- 2. Right-click the device, and select **Test Panels**.

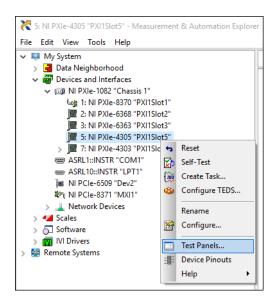

3. Click **Start** to test device functions, or **Help** for operating instructions.

To troubleshoot errors, refer to the *NI-DAQmx Help*, or go to ni.com/support.

Take an NI-DAQmx Measurement

NI-DAQmx Channels and Tasks

Refer to the NI-DAQmx Help for complete information about channels and tasks.

Use the DAQ Assistant to configure virtual channels and tasks in MAX or in your application.

Configure a Task Using the DAQ Assistant in MAX

Complete the following steps to create a task using the DAQ Assistant in MAX:

- In MAX, right-click Data Neighborhood and select Create New to open the DAQ Assistant.
- Select NI-DAOmx Task and click Next.
- 3. Select Acquire Signals.
- 4. Select **Analog Input**, and the measurement type, such as **Voltage**.
- 5. Select the physical channel(s) to use and click **Next**.

- 6. Name the task and click Finish.
- 7 Configure the individual channel settings. Each physical channel you assign to a task receives a virtual channel name. To modify the input range or other settings, select the channel. Click Details for physical channel information. Configure the timing and triggering for your task. Click Run.

Use Your SC Express Device in an Application

For NI software version compatibility, refer to the NI-DAQmx Readme, available from Start» All Programs»National Instruments»NI-DAQmx.

To get started with data acquisition in your application software, refer to the tutorials listed in Table 6.

Table 6. DAQ Assistant Tutorial Locations

Application	Tutorial Location
LabVIEW	Go to ni.com/dataacquisition/videos.
LabWindows/CVI	Go to Help»Contents. Next, go to Using LabWindows/CVI»Data Acquisition»Taking an NI-DAQmx Measurement in LabWindows/CVI.
Measurement Studio	Go to NI Measurement Studio Help»Getting Started with the Measurement Studio Class Libraries»Measurement Studio Walkthroughs»Walkthrough: Creating a Measurement Studio NI-DAQmx Application.
NI SignalExpress*	Go to Help»Taking an NI-DAQmx Measurement in SignalExpress.

^{*} NI Signal Express, an easy-to-use configuration-based tool for data logging applications, is at Start All Programs»National Instruments»NI SignalExpress.

Programming Examples

NI-DAOmx includes example programs to help you get started developing an application. LabVIEW and CVI examples are located at **Help»Find Examples** in your application software. Text-based code examples are located at All Programs»National Instruments»NI-DAOmx» NI-DAOmx Examples. Modify example code and save it in an application, or use examples to develop a new application or add example code to an existing application.

For other examples, go to ni.com/info and enter the Info Code dagmxexp. For additional examples, refer to ni.com/support.

Removal

Terminal Block and Cables Removal

To remove the RM-4304 and PXIe-4304/4305, complete the following steps while referring to Figures 3 and 6:



Note The chassis can be powered on or off when removing the terminal block.

- Remove the RJ50 connector cables from the terminal block 1
- 2 Remove any of the following connections as needed for your application:
 - Disconnect the BNC cable from the PFI0 receptacle.
 - Disconnect the 4-pin calibration bias resistor connector from the 4-pin bias resistor receptacle.
 - Disconnect the 2-pin CAL IN connector from the 2-pin CAL IN receptacle.
 - Disconnect ground wire from the ground screw.
- 3 Loosen the four jack screws and remove the SH96F-96M-42V cable from the terminal block and the module.



Note If required for your application, remove the two standoffs from the module.

- While supporting the terminal block, remove the four rack-mounting screws. 4.
- 5. Remove the terminal block from the rack.
- Store the terminal block in an antistatic protective bag. 6.

Module Removal



Caution Do *not* remove a PXIe-4304/4305 module with the PXIe chassis powered on. Doing so can damage the module.

To remove the PXIe-4304/4305 module, refer to Figure 9 while completing the following steps:



Note To maintain forced air cooling in the PXIe system, refer to the *Maintain* Forced-Air Cooling document.


- Make sure that the chassis is powered off before removing the module. 1.
- 2. Loosen the captive screws on the top and bottom of the module.



Caution Do *not* pull the front panel to remove the module. Doing so may cause module components to come into contact with adjacent modules, causing damage to the modules.

- 3. Pull the captive screws to unseat the module and slowly slide the module along the guides.
- 4. Replace the filler panel in the empty slot.
- Store the module in an antistatic protective bag. 5.

Figure 9. Removing SC Express Modules

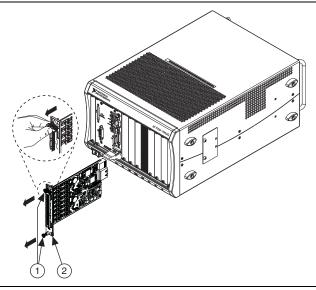

Captive Screws (Use to remove modules.)

Front Panel (Do not use to remove modules.)

Create a Simulated Device

To run examples without the hardware installed, use an NI-DAOmx simulated device. To create a simulated device in MAX:

- 1. Launch MAX.
- 2. Right-click Devices and Interfaces»Create New.
- 3. From the dialog, select Simulated NI-DAOmx Device or Modular Instrument.
- 4. Type 4304 or 4305 in the text box at the top of the window.
- 5. Select the device from the list provided.
- 6. Click OK.
- To simulate an accessory:
 - Right-click the simulated PXIe-4304 (or PXIe-4305)»Configure...
 - Select the Accessory from the Connector 0 drop down. b.
 - Click OK. c.

More Information

After you install NI-DAQmx, the NI-DAQmx documentation is available from **Start» All Programs»National Instruments»NI-DAQ**. Additional resources are online at ni.com/gettingstarted.

You can access online device documentation by right-clicking your module in MAX and selecting **Help»Online Device Documentation**. A browser window opens to ni.com/manuals with the results of a search for relevant documents. If you do not have Web access, documents for supported modules are included on the NI-DAQmx media.

Troubleshooting

- Go to ni.com/support/install or ni.com/kb.
- If you need to return your National Instruments hardware for repair or device calibration, go to ni.com/info and enter rdsenn to start the Return Merchandise Authorization (RMA) process.

Specifications (RM-4304)



Note PXIe-4304/4305 module specifications are located in the *NI PXIe-4304/4305 Specifications* document.

All specifications are typical for the range of 0 °C to 55 °C unless otherwise specified.

Electrical

Input voltage range	Refer to the NI PXIe-4304/4305 Specifications
	document.

Input Characteristics

Number of channels	32 analog input channels
AI± differential input	
Range	Refer to the <i>NI PXIe-4304/4305 Specifications</i> document
Offset voltage ¹	10 μV max @ 23 °C ±5 °C 4 μV typ @ 23 °C ±5 °C
Offset voltage stability	0.5 μV/°C max 0.05 μV/°C

¹ The offset voltage specification of the RM-4304 is an additional offset error that should be added to the offset error of the PXIe-4304/4305 to determine the total system offset error.

AI± to CAL± offset matching	. 2 μV
CAL IN	. ±42 V
RB1, RB2	application specific

Mechanical

RJ50 receptacle

Mean number of insertions

Channel configuration switches

Switch type Electromechanical relay, latching Expected switch life


Mechanical...... 5×10^7 cycles Electrical 2×10^5 cycles

Connectors

RJ50	32
BNC	. 1
96-pin DIN	. 1
COMBICON 2 position	1
COMBICON 4 position	1

Physical Characteristics

Figure 10. RM-4304 Dimensions

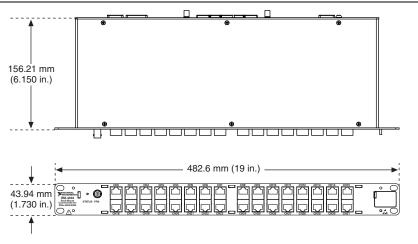



Caution Clean the hardware with a soft, nonmetallic brush. Make sure that the hardware is completely dry and free from contaminants before returning it to service.

Environmental

Maximum altitude	2,000 m (800 mbar), at 25 °C ambient
	temperature
Pollution Degree	2

Indoor use only

Operating Environment

Ambient temperature range	.0 °C to 55 °C
	(Tested in accordance with IEC 60068-2-1 and
	IEC 60068-2-2. Meets MIL-PRF-28800F
	Class 3 low temperature limit and
	MIL-PRF-28800F Class 2 high temperature
	limit.)
Relative humidity range	.10% to 90%, noncondensing
	(Tested in accordance with IEC 60068-2-56.)

Storage Environment

Ambient temperature range	40 °C to 71 °C
	(Tested in accordance with IEC 60068-2-1 and
	IEC 60068-2-2. Meets MIL-PRF-28800F
	Class 3 limits.)
Relative humidity range	5% to 95%, noncondensing
	(Tested in accordance with IEC 60068-2-56.)

Shock and Vibration

Operating shock	30 g peak, half-sine, 11 ms pulse (Tested in accordance with IEC 60068-2-27. Meets MIL-PRF-28800F Class 2 limits.)
Random vibration	
Operating	5 Hz to 500 Hz, 0.3 g _{rms}
Non-operating	5 Hz to 500 Hz, 2.4 g _{rms}
	(Tested in accordance with IEC 60068-2-64.
	Non-operating test profile exceeds the

requirements of MIL-PRF-28800F, Class 3.)

Safety

Measurement Category......I1



Caution Do *not* connect the RM-4304 to signals or use for measurements within Measurement Categories II. III. or IV.



Caution The protection provided by the RM-4304 can be impaired if it is used in a manner not described in this document.

Safety Standards

This product meets the requirements of the following standards of safety for electrical equipment for measurement, control, and laboratory use:

- IEC 61010-1, EN 61010-1
- UL 61010-1, CSA 61010-1



Note For UL and other safety certifications, refer to the product label or the *Online* Product Certification section.

Electromagnetic Compatibility

This product meets the requirements of the following EMC standards for electrical equipment for measurement, control, and laboratory use:

- EN 61326-1 (IEC 61326-1): Class A emissions; Basic immunity
- EN 55011 (CISPR 11): Group 1, Class A emissions
- EN 55022 (CISPR 22): Class A emissions
- EN 55024 (CISPR 24): Immunity
- AS/NZS CISPR 11: Group 1, Class A emissions
- AS/NZS CISPR 22: Class A emissions
- FCC 47 CFR Part 15B: Class A emissions
- ICES-001: Class A emissions



Note In the United States (per FCC 47 CFR), Class A equipment is intended for use in commercial, light-industrial, and heavy-industrial locations. In Europe, Canada. Australia and New Zealand (per CISPR 11) Class A equipment is intended for use only in heavy-industrial locations.

Measurement Categories CAT I and CAT O are equivalent. These test and measurement circuits are not intended for direct connection to the MAINS building installations of Measurement Categories CAT II, CAT III, or CAT IV.



Note Group 1 equipment (per CISPR 11) is any industrial, scientific, or medical equipment that does not intentionally generate radio frequency energy for the treatment of material or inspection/analysis purposes.



Note For the standards applied to assess the EMC of this product, refer to the Online Product Certification section.

CE Compliance (€

This product meets the essential requirements of applicable European Directives as follows:

- 2014/35/EU; Low-Voltage Directive (safety)
- 2014/30/EU; Electromagnetic Compatibility Directive (EMC)

Online Product Certification

Refer to the product Declaration of Conformity (DoC) for additional regulatory compliance information. To obtain product certifications and the DoC for this product, visit ni.com/ certification, search by model number or product line, and click the appropriate link in the Certification column.

Environmental Management

NI is committed to designing and manufacturing products in an environmentally responsible manner. NI recognizes that eliminating certain hazardous substances from our products is beneficial to the environment and to NI customers.

For additional environmental information, refer to the Minimize Our Environmental Impact web page at ni.com/environment. This page contains the environmental regulations and directives with which NI complies, as well as other environmental information not included in this document

Waste Electrical and Electronic Equipment (WEEE)



EU Customers At the end of the product life cycle, all products *must* be sent to a WEEE recycling center. For more information about WEEE recycling centers, National Instruments WEEE initiatives, and compliance with WEEE Directive 2002/96/EC on Waste and Electronic Equipment, visit ni.com/environment/ weee.

电子信息产品污染控制管理办法 (中国 RoHS)



中国客户 National Instruments 符合中国电子信息产品中限制使用某些有害物质指令 (RoHS)。关于 National Instruments 中国 RoHS 合规性信息,请登录 ni.com/ environment/rohs_china。 (For information about China RoHS compliance, go to ni.com/environment/rohs_china.)

World Wide Support and Services

The National Instruments website is your complete resource for technical support. At ni.com/ support you have access to everything from troubleshooting and application development self-help resources to email and phone assistance from NI Application Engineers.

Visit ni.com/services for NI Factory Installation Services, repairs, extended warranty, and other services.

Visit ni.com/register to register your National Instruments product. Product registration facilitates technical support and ensures that you receive important information updates from NI.

National Instruments corporate headquarters is located at 11500 North Mopac Expressway, Austin, Texas, 78759-3504. National Instruments also has offices located around the world. For telephone support in the United States, create your service request at ni.com/support or dial 1 866 ASK MYNI (275 6964). For telephone support outside the United States, visit the Worldwide Offices section of ni.com/niglobal to access the branch office websites, which provide up-to-date contact information, support phone numbers, email addresses, and current events.

product and company names mentioned her	<i>lines</i> at ni.com/trademarks for more informati ein are trademarks or trade names of their respectiv	e companies. For patents covering National
Instruments products/technology, refer to the National Instruments Patents Notice at nice legal notices in the readme file for your No Tor the National Instruments global trade com NO EXPRESS OR IMPLIED WARRANTIES AS ANY ERRORS. U.S. Government Customers:	e appropriate location: Help-Patents in your softwar scom/patents. You can find information about end- roduct. Refer to the Export Compliance Information a spliance policy and how to obtain relevant HTS codes. S TO THE ACCURACY OF THE INFORMATION CONTA The data contained in this manual was developed at the torth in FAR 52.227-14, DFAR 252.227-7014, and	re, the patents.txt file on your media, or the user license agreements (EULAs) and third-party at ni.com/legal/export-compliance, ECCNs, and other import/export data. NI MAKES AINED HEREIN AND SHALL NOT BE LIABLE FOR t private expense and is subject to the applicable
377022A-01	Apr16	