COMPREHENSIVE SERVICES

We offer competitive repair and calibration services, as well as easily accessible documentation and free downloadable resources.

SELL YOUR SURPLUS

We buy new, used, decommissioned, and surplus parts from every NI series. We work out the best solution to suit your individual needs.

Sell For Cash Get Credit Receive a Trade-In Deal

OBSOLETE NI HARDWARE IN STOCK & READY TO SHIP

We stock New, New Surplus, Refurbished, and Reconditioned NI Hardware.



Bridging the gap between the manufacturer and your legacy test system.

0

1-800-915-6216



www.apexwaves.com

sales@apexwaves.com

All trademarks, brands, and brand names are the property of their respective owners.

Request a Quote



PXI-1031

INSTALLATION GUIDE


NI PXI-1031 Handle/Feet Kit

To install the kit, complete the following steps.

- 1. Remove COA label plate (as required).
- 2. Install the four rubber feet using four M4 shoulder screws.
- 3. Install the handle as shown using four M3 \times 10 panhead screws.



Note You can install the handle/feet kit on either side of the chassis.

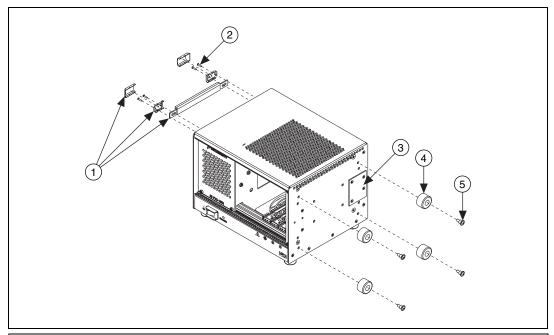

- 1 Chassis Handle (Qty. 1)
- 2 M3 × 10 Panhead Screw (Qty. 4)
- 3 COA Label Plate

- 4 Rubber Feet (Qty.4)
- 5 M4 Shoulder Screws (Qty. 4)

Figure 1. NI PXI-1031 with Optional Handle/Feet Kit



National Instruments™, NI™, and ni.com™ are trademarks of National Instruments Corporation. Product and company names mentioned herein are trademarks or trade names of their respective companies. For patents covering National Instruments products, refer to the appropriate location: Help»Patents in your software, the patents.txt file on your CD, or ni.com/patents. © 2004 National Instruments Corp. All rights reserved.



370995A-01

Feb04