COMPREHENSIVE SERVICES

We offer competitive repair and calibration services, as well as easily accessible documentation and free downloadable resources.

SELL YOUR SURPLUS

We buy new, used, decommissioned, and surplus parts from every NI series. We work out the best solution to suit your individual needs.

Sell For Cash Get Credit Receive a Trade-In Deal

OBSOLETE NI HARDWARE IN STOCK & READY TO SHIP

We stock New, New Surplus, Refurbished, and Reconditioned NI Hardware.



Bridging the gap between the manufacturer and your legacy test system.

0

1-800-915-6216



www.apexwaves.com

sales@apexwaves.com

All trademarks, brands, and brand names are the property of their respective owners.

Request a Quote



PCI-6255

support@ni.com



Manufacturer: National Instruments

Board Assembly Part Numbers (Refer to Procedure 1 for identification procedure):

Double Hispering July Hambers (Herei to Hoceanie Herei dentification procedure).							
Part Number and Revision	Description						
190996B-04 or later	PCI-6250						
191325B-04or later	PXI-6250						
190996B-03or later	PCI-6251						
192242A-03 or later	PCIe-6251						
191325B-03, 191325D-13 or later	PXI-6251						
196100A-03 or later	PXIe-6251						
190996B-02 or later	PCI-6254						
191325B-02 or later	PXI-6254						
193588A-01 or later	PCI-6255						
193618A-01 or later	PXI-6255						
190996A-01 or later	PCI-6259						
192242A-01 or later	PCIe-6259						
191325A-01, 191325D-11 or later	PXI-6259						
196100A-01 or later	PXIe-6259						

Volatile Memory

Target Data	Туре	Size	Battery Backup	User ¹ Accessible	System Accessible	Sanitization Procedure
None						

Non-Volatile Memory (incl. Media Storage)

			Battery	User	System	SanitizationProcedure
Target Data	Type	Size	Backup	Accessible	Accessible	
Device configuration	EEPROM	2 KB	No			
 Device information 				No	Yes	None
 Calibration metadata 				Yes	Yes	Procedure 2
• Calibration data ²				No	Yes	None

¹ Refer to *Terms and Definitions* section for clarification of *User* and *System Accessible*

² Calibration constants that are stored on the device include information for the device's full operating range. Any implications resulting from partial self-calibration can be eliminated by running the full self-calibration procedure.

support@ni.com




Procedures


Procedure 1–Board Assembly Part Number Identification:

To determine the Board Assembly Part Number and Revision,refer to the "P/N" label applied to the surface of your product as shown below. The Assembly Part Number should be formatted as "P/N: #####a-vvL" where "a" is the letter revision of the Board Assembly (eg. A, B, C...) and the "vv" is the type identifier. If the product is RoHS compliant, "L" can be found at the end of the part number.

PCI-6250/6251/6254/6259 - Primary Side

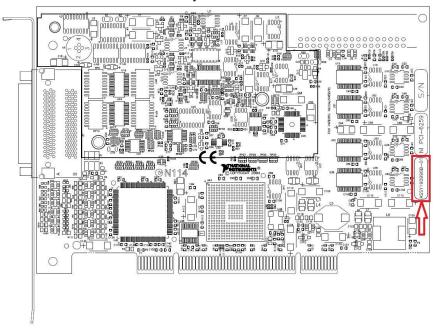


PCI-6255 – Primary Side

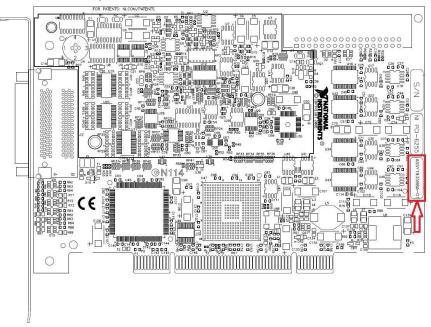


support@ni.com



PCIe-6251/6259 – Secondary Side

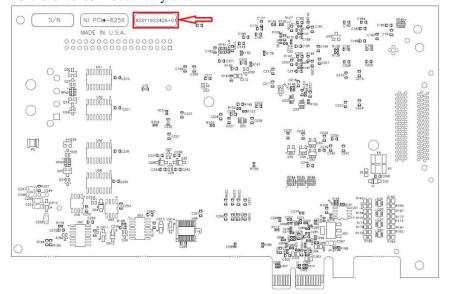


PXI-6250/6251/6254/6259 - Secondary Side

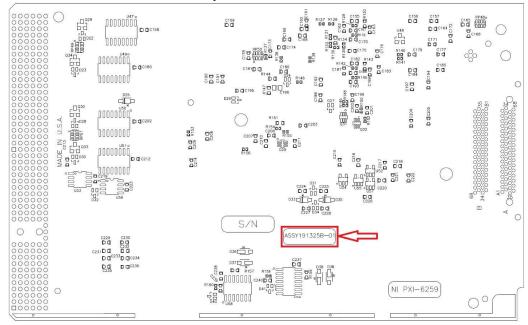


support@ni.com



PXI-6255 – Secondary Side

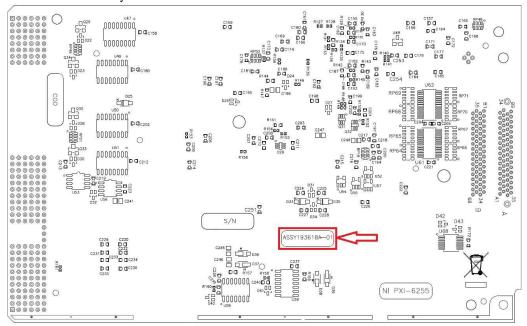

PXIe-6251/6259 - Secondary Side

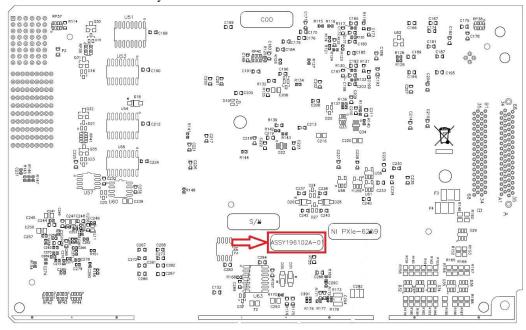

Procedure 2 – Device Configuration EEPROM (Calibration Metadata):

The user-accessible areas of the Device Configuration EEPROM are exposed through a calibration Applications Programming Interface (API) in LabVIEW. To clear the Calibration Metadata area, complete the following steps:

- 1. To clear the calibration password, use the DAQmx Change External Calibration Password.vi to overwrite the current password of the device you wish to clear.
- 2. The user-accessible area of the Device Configuration EEPROM can be cleared using the NI DAQmx API. For instructions on how to clear these areas, go to www.ni.com/info and enter info code DAQmxLOV.

support@ni.com



Terms and Definitions

Cycle Power:

The process of completely removing power from the device and its components and allowing for adequate discharge. This process includes a complete shutdown of the PC and/or chassis containing the device; a reboot is not sufficient for the completion of this process.

Volatile Memory:

Requires power to maintain the stored information. When power is removed from this memory, its contents are lost. This type of memory typically contains application specific data such as capture waveforms.

Non-Volatile Memory:

Power is not required to maintain the stored information. Device retains its contents when power is removed. This type of memory typically contains information necessary to boot, configure, or calibrate the product or may include device power up states.

User Accessible:

The component is read and/or write addressable such that a user can store arbitrary information to the component from the host using a publicly distributed NI tool, such as a Driver API, the System Configuration API, or MAX.

System Accessible:

The component is read and/or write addressable from the host without the need to physically alter the product.

Clearing:

Per NIST Special Publication 800-88 Revision 1, "clearing" is a logical technique to sanitize data in all User Accessible storage locations for protection against simple non-invasive data recovery techniques using the same interface available to the user; typically applied through the standard read and write commands to the storage device.

Sanitization:

Per NIST Special Publication 800-88 Revision 1, "sanitization" is a process to render access to "Target Data" on the media infeasible for a given level of effort. In this document, clearing is the degree of sanitization described.